## Pt. 43, App. A

the following types, are powerplant major repairs:

- (i) Separation or disassembly of a crankcase or crankshaft of a reciprocating engine equipped with an integral supercharger.
- (ii) Separation or disassembly of a crankcase or crankshaft of a reciprocating engine equipped with other than spur-type propeller reduction gearing.
- (iii) Special repairs to structural engine parts by welding, plating, metalizing, or other methods.
- (3) Propeller major repairs. Repairs of the following types to a propeller are propeller major repairs:
- (i) Any repairs to, or straightening of steel blades.
  - (ii) Repairing or machining of steel hubs.
  - (iii) Shortening of blades.
  - (iv) Retipping of wood propellers.
- (v) Replacement of outer laminations on fixed pitch wood propellers.
- (vi) Repairing elongated bolt holes in the hub of fixed pitch wood propellers.
  - (vii) Inlay work on wood blades.
  - (viii) Repairs to composition blades.
  - (ix) Replacement of tip fabric.
    (x) Replacement of plastic covering.
- (xi) Repair of propeller governors.
- (xii) Overhaul of controllable pitch propel-
- lers.
  (xiii) Repairs to deep dents, cuts, scars, nicks, etc., and straightening of aluminum
- blades.
  (xiv) The repair or replacement of internal elements of blades.
- (4) Appliance major repairs. Repairs of the following types to appliances are appliance major repairs:
  - (i) Calibration and repair of instruments.
  - (ii) Calibration of radio equipment.
- (iii) Rewinding the field coil of an electrical accessory.
- (iv) Complete disassembly of complex hydraulic power valves.
- (v) Overhaul of pressure type carburetors, and pressure type fuel, oil and hydraulic pumps.
- (c) Preventive maintenance. Preventive maintenance is limited to the following work, provided it does not involve complex assembly operations:
- (1) Removal, installation, and repair of landing gear tires.
- (2) Replacing elastic shock absorber cords on landing gear.
- (3) Servicing landing gear shock struts by adding oil, air, or both.
- (4) Servicing landing gear wheel bearings, such as cleaning and greasing.
- (5) Replacing defective safety wiring or cotter keys.
- (6) Lubrication not requiring disassembly other than removal of nonstructural items such as cover plates, cowlings, and fairings.
- (7) Making simple fabric patches not requiring rib stitching or the removal of struc-

tural parts or control surfaces. In the case of balloons, the making of small fabric repairs to envelopes (as defined in, and in accordance with, the balloon manufacturers' instructions) not requiring load tape repair or replacement.

- (8) Replenishing hydraulic fluid in the hydraulic reservoir.
- (9) Refinishing decorative coating of fuselage, balloon baskets, wings tail group surfaces (excluding balanced control surfaces), fairings, cowlings, landing gear, cabin, or cockpit interior when removal or disassembly of any primary structure or operating system is not required.
- (10) Applying preservative or protective material to components where no disassembly of any primary structure or operating system is involved and where such coating is not prohibited or is not contrary to good practices.
- (11) Repairing upholstery and decorative furnishings of the cabin, cockpit, or balloon basket interior when the repairing does not require disassembly of any primary structure or operating system or interfere with an operating system or affect the primary structure of the aircraft.
- (12) Making small simple repairs to fairings, nonstructural cover plates, cowlings, and small patches and reinforcements not changing the contour so as to interfere with proper air flow.
- (13) Replacing side windows where that work does not interfere with the structure or any operating system such as controls, electrical equipment, etc.
  - (14) Replacing safety belts.
- (15) Replacing seats or seat parts with replacement parts approved for the aircraft, not involving disassembly of any primary structure or operating system.
- (16) Trouble shooting and repairing broken circuits in landing light wiring circuits.
- (17) Replacing bulbs, reflectors, and lenses of position and landing lights.
- (18) Replacing wheels and skis where no weight and balance computation is involved.
- (19) Replacing any cowling not requiring removal of the propeller or disconnection of flight controls.
- (20) Replacing or cleaning spark plugs and setting of spark plug gap clearance.
- (21) Replacing any hose connection except hydraulic connections.
  - (22) Replacing prefabricated fuel lines.
- (23) Cleaning or replacing fuel and oil strainers or filter elements.
- (24) Replacing and servicing batteries.
- (25) Cleaning of balloon burner pilot and main nozzles in accordance with the balloon manufacturer's instructions.
- (26) Replacement or adjustment of nonstructural standard fasteners incidental to operations.
- (27) The interchange of balloon baskets and burners on envelopes when the basket or